

# EasyBuilder Pro Release Notes

V6.08.01

# Software Version : EasyBuilder Pro V6.08.01.190

## **New Features**

#### EasyBuilder Pro

#### 1. [Address Grid]

Added an option for showing only the addresses in use.

Addres	55	<b>•</b> ×
Mode	Device	
5	Show Addresses in use	
Device name Local HMI		•
Statio	on no. Default	•
Address	s type LB	•
Ad	ddress	
	0 1 2 3 4 5 6 7 8 9	
08990		
09000		
09030		
09040		
12360		

#### 2. [Window Copy]

SQL Query related settings of a source file can be copied.

#### cMT/cMT X Series

Feature additions listed in this section are available for cMT / cMT X series models that support the said features.

1. [Data Transfer (Global)]

Settings can be imported or exported.

#### 2. [Slider]

Non-local HMI device addresses can be used as watch address.

- [Picture]
  A picture object can be enabled or disabled according to the state of a bit address.
- 4. [Event Log]

An event can be enabled or disabled according to the state of a bit address. When an event is disabled, the communication with its related addresses is stopped as well.



# **EasyBuilder Pro** Release Notes V6.08.01

#### 5. [File Browser]

Non-ASCII filenames can be displayed. (OS restrictions apply.)

#### 6. [Data Sampling]

The oldest data can be deleted by using the control command.

#### 7. [Trend Display]

When a watch line is displayed, it will be the center line for zooming along the X axis.

#### 8. [Combo Button]

Added "Change state by ranges" setting for Word Lamp. (Also available for non-cMT models.)

#### 9. [System Settings]

A startup screen can be saved in a project file.

#### **10.** [PLC Web Browser]

Added "Rounded corners" option. (OS restrictions apply.)

**11.** [Trend Display][Event Display] and similar objects whose time range can be specified Optimized the way to set time range.

#### 12. [OPC UA Server]

Added "Information modeling mode".

All features listed in this section are added on cMT / cMT X series for compatibility with the behavior of legacy models.

#### 13. [Trend Display]

Added new option: Value alignment of Y-scale. Available modes include: "Center on tick" and "Full text".

#### cMT Viewer

**1.** Added Droid Sans Japanese font support.

#### Serial Pass-Through

1. Added Mitsubishi A Series Initialization.

### **Communication and Drivers**

 [CODESYS V3 (Ethernet)][Schneider SoMachine M Series (Ethernet)] Added support for string arrays.