


## 1. Product Model List

Type with ethernet	24VDC power supply	Type with ethernet	220VAC power supply	Type	24VDC power supply	Type	220VAC power supply	Dimension
H16S0R-e	3.1VA	H16S2R-e	5.6VA	H16S0R	2.5VA	H16S2R	5 VA	93 × 95 × 82mm
H16S0T-e	4.1VA	H16S2T-e	6.1VA	H16S0T	3.5VA	H16S2T	5.5VA	
N16S0T-e	4.1VA	N16S2T-e	6.1VA	N16S0T	3.5VA	N16S2T	5.5VA	
H24S0R-e	3.6VA	H24S2R-e	6.1VA	H24S0R	3 VA	H24S2R	5.5VA	
H24S0T-e	4.6VA	H24S2T-e	7.1VA	H24S0T	4 VA	H24S2T	6.5VA	131 × 95 × 82mm
N24S0T-e	4.6 VA	N24S2T-e	7.1VA	N24S0T	4 VA	N24S2T	6.5VA	
H32S0R-e	4.1VA	H32S2R-e	6.6VA	H32S0R	3.5VA	H32S2R	6 VA	
H32S0T-e	5.1VA	H32S2T-e	7.1VA	H32S0T	4.5VA	H32S2T	6.5VA	
H40S0R-e	4.6VA	H40S2R-e	7.1VA	H40S0R	4 VA	H40S2R	6.5VA	177 × 95 × 82mm
H40S0T-e	5.6VA	H40S2T-e	8.1VA	H40S0T	5 VA	H40S2T	7.5VA	
N40S0T-e	6.1VA	N40S2T-e	8.6VA	N40S0T	5.5VA	N40S2T	8 VA	
H60S0R-e	5.1VA	H60S2R-e	8.1VA	H60S0R	4.5VA	H60S2R	7.5VA	
H60S0T-e	6.1VA	H60S2T-e	8.6VA	H60S0T	5.5VA	H60S2T	8 VA	
N60S0T-e	7.1VA	N60S2T-e	9.1VA	N60S0T	6.5VA	N60S2T	8.5VA	

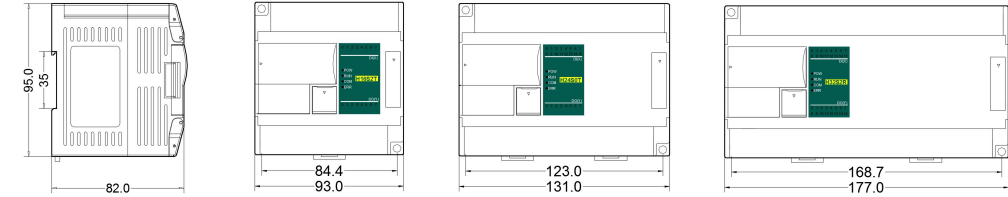

## 2. Indicator Description

- ① POW: Power indicator, green. Continuous ON - Power good; OFF - Power error.
- ② RUN: Running indicator, green. Continuous ON - PLC is in running state; OFF - PLC was shutdown.
- ③ COM: Communication indicator, green. Flickering - PLC is in communicating state, the flicker frequency indicates the speed of the communication; OFF - No communication.
- ④ ERR: Error indicator, double (red, yellow), as follows

Consult manage	Signify information type	ERR the state of the indicator
Normal	Without error	Not light
Normal, just prompt take attention to the locked data	PLC have the component which locked	Yellow flicker: On 0.2 seconds and Off 0.8 seconds
Modify the PLC hardware configure	Problem in the soft setting, permit user keep on operate the user program	Yellow flicker: On 0.2 seconds and Off 0.8 seconds
Check module parallel bus (check the RTC battery; check extension module power supply)	Communication abnormal between module, auto dislodge the abnormal module, permit user keep on operate the user program	Yellow flicker: On 0.8 seconds and Off 0.2 seconds
Upgrade the firmware or modify the user program	Firmware abnormal or user program abnormal, can not operate the user program	Red slowly flicker: indicator light 0.5s not light 0.5s
Maintain	Hardware error, user program can not running	yellow constant light

## 3. Power Supply Specification

Item	AC Power Supply	DC Power Supply
Power Supply Voltage	100~240VAC	DC24V -15%~+20%
Power Supply Frequency	50~60Hz	---
Power Consumption	25VA MAX	---
Instantaneous Surge	20A 1.5ms MAX @220VAC	20A 1.5ms MAX @24VDC
Power Loss Time	20ms or less @220VAC	10ms or less
Fuse	2A, 250VAC	2A, 250VAC
5V Output Voltage (for CPU)	5V, -2%~+2%, 1.2A MAX	5V, -2%~+2%, 1.2A MAX
24V Output Voltage (for output and extension)	24V, -15%~+15%, 500mA MAX	24V, -15%~+15%, 500mA MAX
24V Output Voltage (for input and peripheral)	24V, -15%~+15%, 300mA MAX	Use external 24VDC power supply
Insulation Type	Transformer isolation or optoelectronic isolation, 1500VAC/1 minute	No Electrical isolation
Power Protection	DC24V output over current	DC input power polarity reverse, over voltage

## 4. Environmental specifications for Product

Item	Environment Specification
Temperature/Humidity	Operating temperature: 0~+55°C Storage temperature: -25~+70°C Humidity: 5~95%RH, No condensation
Vibration Resistance	10~57 HZ, amplitude=0.075mm, 57HZ~150HZ acceleration=1G, 10 times each for X-axis, Y-axis and Z-axis
Impact Resistance	15G, duration=11ms, 6 times each for X-axis, Y-axis and Z-axis
Interference Immunity	AC EFT: ±2500V Surge: ±2500V DC EFT: ±2500V Surge: ±1000V
Over Voltage Resistance	1500VAC/1min between AC terminal and PE terminal, 500VAC/1min between DC terminal and PE terminal
Insulation Impedance	≥5MΩ between AC terminal and all input/output points to PE terminal @500VDC
Ground	The third kind of grounding (Connecting to the ground of high voltage system is prohibited)
Operating environment	Avoid dust, moisture, corrosion, electric shock and external shocks


## 5. Digital Input (DI) Specification

Item	Digital Input (DI)
Input Signal	No voltage contact or NPN/PNP
Action driving	ON>3.5mA OFF<1.5mA
Input Impedance	Input Impedance=4.3KΩ
Maximum Input Current	10mA
Reaction Time	6.4ms DEFAULT, can be configured to 0.8~51.2ms
Insulation Type	Optoelectronic isolation for each channel
Input Indication	LED's lighting indicates ON, no light indicates OFF
Power supply	MPU internal power supply; DC power supply (SINK or SOURCE) 5.3mA@24VDC


## 6. Digital Output (DO) Specification

Item	Output point type : Relay - R	Output point type : Transistor - T
Maximum load	Resistive Load	2A/1 point, 8A/4 points COM
	Inductive Load	50VA
	Lamp load	100W
Minimum Load		2mA
		30VDC
Voltage Specification	Below 250VAC, 30VDC	
Drive Capability	Maximum contact capacity: 5A/250VAC	1A MAX, 10 seconds
Reaction Time	Off→On 10ms, On→off 5ms	Off→On 10us, On→Off 120us
Insulation Type	Mechanical isolation	Optoelectronic isolation for each channel
Output Indication	LED's lighting indicates ON, no light indicates OFF	
Power Supply	MPU internal 24VDC power supply	

## 7. Digital Input/Output (DI/DO) Wiring

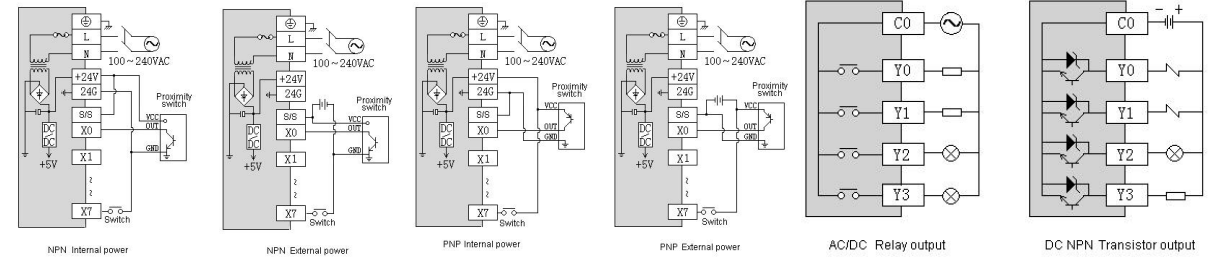

## 8. MPU Terminal Wiring Diagram

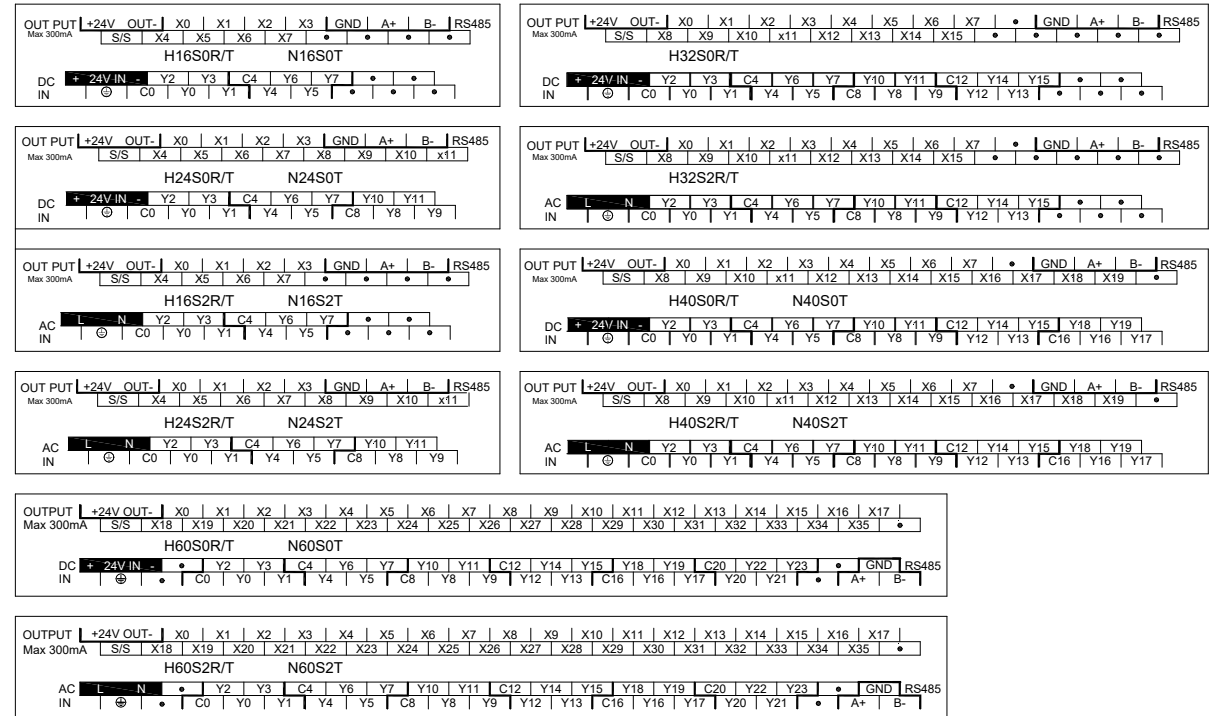

## 9. Mounting and installation


The PLC should be secured to an enclosed cabinet while mounting. For heat dissipation, make sure to provide a minimum clearance of 50mm between the unit and all sides of the cabinet. (See the figure.)

**Rail Mounting:** Use standard 35 mm rail.


**Screw Mounting:** Each MPU or extension module has two positioning screw holes, the diameter of the hole is 4.5mm. Please refer to the dimension figure for the location of the positioning holes and their spacing.

To avoid over temperature and for a better heat dissipation, do not mount PLC to a position near to the bottom/top of the cabinet. Do not mount PLC in vertical direction.

**Extension Module Wiring:** Connections between extension modules and connections between module and MPU are achieved through bus. An extension cable will be configured to every extension module, for the connection between two different modules. Connection methods: turn the right side of extended interface (the last MPU or extension module) over, plug the extension cable in the extended interface, then press down the cover of the extended interface to reset the interface, the extended interface at the right side of the module will be reserved for extension of the next module. Connect all extension modules in turn in the same way.

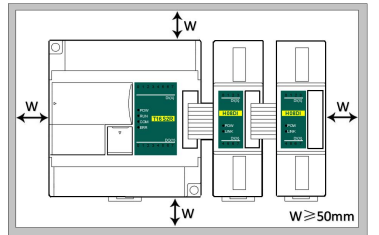

## 10. Programming Cable Wiring

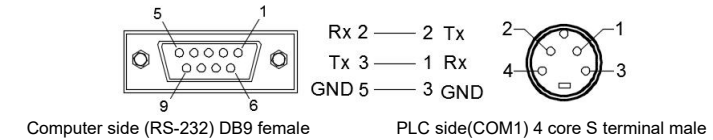

## 11. Address Setting

Haiwell PLC with Ethernet port, the default IP address is : 192.168.0.111. Hardware DIP dial switch address range: 1-15, the default address is 1. If you need to set a bigger address range, you can set on the software after connection with plc, it can be set on the PLC parameter option in the software menu by checking on the "soft address" with the range of 1-254 (the soft address is prior to the hardware dial address).

## 12. Power Supply Wiring

There are two kinds of power supplies for PLC: AC input and DC input. Please pay particular attention to the following notes:

- AC input voltage is 100~240VAC 50/60Hz unless otherwise stated. Connecting any one of the AC input wires to the terminal-L and terminal-N on the MPU will be OK, but for safety's sake, please connect the two wires (Live Wire & Neutral Wire) of AC input to terminal-L and terminal-N respectively.
- Any AC110V or AC220V connected to the +24V terminal or input points will permanently damage the PLC.
- Please use wires of 2.5mm or above for the grounding of the MPU.

Thanks for choosing Haiwell PLC, If you have any questions about our products or services, please let us know!

Haiwell website: <http://www.haiwell.com> <http://www.haiwell.cn>

V1.0 Copyright © 2005 Xiamen Haiwell Technology Co.,Ltd