

Software Version : EasyBuilder Pro V6.04.01.473

Corrections

- **1.** Fixed an issue where addresses used by bool arrays in macro and Option List are not shown in the address grid.
- 2. Fixed an issue where extended memory related error messages may appear during compilation when an earlier version project is opened using new version software.
- **3.** Fixed an issue where the position of the flow block is incorrect when an earlier version project is opened using new version software.
- **4.** Fixed an issue where macros used in Numeric Input, Action Trigger, and Touch Gesture cannot be found by Find / Replace.
- Increased maximum allowable length to 256 characters for Connection String of MQTT Azure IoT.
- 6. Removed string table related settings for iP Series since they are not supported on iP Series.

Drivers

| 1. | [Rockwell Micro850] | Fixed an issue where using a non-zero index in an array in Structure may result in data |
|----|----------------------------------|--|
| | | reading error. |
| 2. | [Moeller XC-CPU101] | Added MW_bit address. |
| 3. | [Schneider MODBUS TCP/IP] | Fixed an issue where bool array addresses are not correctly displayed after importing an XSY file. |
| 4. | [OMRON EtherNet/IP NJ/NX Series] | Added support for Import / Export. |

5. Fixed an issue where off-line simulation cannot be closed normally when using certain drivers.



Software Version : EasyBuilder Pro V6.04.01.388

Corrections

- **1.** [Multi-State Switch] Fixed an issue where the Apply button in object's properties window does not work properly.
- 2. Declared variables in macro will retain the result from last execution.
- **3.** [iP] Fixed an issue where dates on Trend Display's time axis are not displayed.
- 4. Fixed an issue where the screensaver appears only once on iOS version cMT Viewer.
- **5.** [Database Server] Fixed an issue where [Use domain name] setting cannot be remembered.

Drivers

| 6. | [Schleicher XCX 300/800] | Added MD_STRING address type. Added support for importing |
|----|---------------------------------|--|
| | | LocalVariable(POU). |
| 7. | [Rockwell Micro850] | Fixed issues relating to tag import. |
| | [OMRON CJ/CS/CP (Ethernet – | |
| | FINS/TCP)] | |
| | [Beckhoff TwinCAT 3 ADS/AMS | |
| | (Ethernet)] | |
| | [Rockwell - Free Tag Names] | |
| 8. | [XINJE XD Series (Ethernet)] | Expanded address ranges. |
| 9. | [XINJE XD Series MODBUS TCP/IP] | Added new driver. |



EasyBuilder Pro Release Notes

V6.04.01

Software Version : EasyBuilder Pro V6.04.01.291

Corrections

EasyBuilder Pro

- 1. Fixed an issue where in [System Parameters] » [Security], certain settings are not correctly saved.
- 2. [iE/XE/eMT/mTV] Fixed an issue where the setting of system register LB-12089 is not retained after rebooting HMI.
- **3.** [cMT] Updated printer driver suite to hplip 3.19.12 version.
- 4. Fixed issues concerning compilation of cMT-G03 project files.
- **5.** [cMT] Added system registers that support configuring devices up to device 64.
- **6.** [cMT] Fixed a comparison logic issue of ">=" in macro.
- 7. [Serial Pass-Through] Updated the virtual COM driver. On Win10 computers, the driver can work properly after installation without the need for changing BIOS setting.

Drivers

| 1. | [Mitsubishi A2A/A2U/A2AS/A2USH] | Added A2USH device type. |
|----|------------------------------------|---|
| 2. | [BACnet/IP Server] | Fixed an issue that causes the server to not |
| | | work properly. |
| З. | [MODBUS RTU, RTU over TCP] | Fixed an issue where HMI may stop |
| | [MODBUS RTU Zero-based Addressing] | operating when setting 0x register ON. |
| | [MODBUS Hex Addressing] | This issue only affects versions ranging from |
| | [ELSIST MODBUS RTU] | 6.04.01.078 to 6.04.01.286. |
| | [CD MODBUS RTU] | |

TEL: (886)2-22286770 / FAX: (886)2-22286771 9F., No.910, Zhongzheng Rd., Zhonghe Dist., New Taipei City 23586, Taiwan Copyright © 2018 Weintek Labs., Inc. All rights reserved.

www.weintek.com



EasyBuilder Pro Release Notes

Software Version: EasyBuilder Pro V6.04.01.250


Supported Models

Added cMT3092X, cMT3152X, and cMT3162X.

New Features

EasyBuilder Pro

 Added Opacity setting in View tab. This setting adds transparency effect to the common window, overlay windows, and window layers. The screenshot below shows the middle object, placed in a different window layer, having transparent effect.



2. Added support for showing user-defined tags and system registers in Address Grid.

| Address 🗸 🗸 | | | | |
|---|--|-----------|--|--|
| Mode System tags 🔹 | | | | |
| Show all addresses | | | | |
| ۹ | | | | |
| LW-9017 (16bit) : local second | | | | |
| LW-9018 (16bit) : local minute | | | | |
| LW-9019 (16bit) : | | | | |
| LW-9020 (16bit) : | · · · · · · · · · · · · · · · · · · · | | | |
| LW-9021 (16bit) : local month | | | | |
| LW-9022 (16bit) : local year | | | | |
| LW-9023 (16bit) : local day of week | | | | |
| | | | | |
| LW-9024 (16bit) : | memory link system regi | iste | | |
| LW-9024 (16bit) : LW-9025 (16bit) : | | ~ | | |
| LW-9024 (16bit) : | memory link system regi | iste > | | |
| LW-9024 (16bit) : LW-9025 (16bit) : | memory link system regi | ~ | | |
| LW-9024 (16bit) : LW-9025 (16bit) : | memory link system regi CPU loading (x 100%) | ~ | | |
| LW-9024 (16bit) : LW-9025 (16bit) : LW-9025 (16bit) : | memory link system reg CPU loading (x 100%) Name | ~ | | |
| LW-9024 (16bit) : LW-9025 (16bit) : Cocation Window_0080 | memory link system reg CPU loading (x 100%) Name MD_2 | ~ | | |
| LW-9024 (16bit) : LW-9025 (16bit) : Cocation Window_0080 | memory link system reg CPU loading (x 100%) Name MD_2 MD_5 | ~ | | |

www.weintek.com

TEL: (886)2-22286770 / FAX: (886)2-22286771 9F., No.910, Zhongzheng Rd., Zhonghe Dist., New Taipei City 23586, Taiwan Copyright © 2018 Weintek Labs., Inc. All rights reserved.

EasyBuilder Pro Release Notes v6.04.01

3. Added support for showing the label tag name of the object (if a label tag is used). This setting can be found in View tab.

cMT Series

All features listed in this section is available exclusively for cMT series only.

| 1. | [Touch Gesture] | Added the touch gesture feature. (applicable only for cMT3152X, |
|----|--------------------|--|
| | | cMT3162X) |
| 2. | [Enhanced Security | Added support for user login with Microsoft AD (LDAP protocol). |
| | Mode] | |
| 3. | [Direct Window] | Added support for changing window position dynamically. This |
| | [Indirect Window] | setting can be found in the Position tab in the object settings |
| | | window. |
| 4. | [Meter] | For the customized meter style, changed pointer width and length |
| | | setting value to percentage instead, and allowed wider range of |
| | | values for selection. With the new settings, using a 1:1 picture as |
| | | pointer style is possible, as shown in the following compass example |
| | | application. |
| | | S |




| 5. | [Numeric] | Added support for using Scientific Notation for Numeric objects, as | | |
|----|-----------------|--|--|--|
| | | shown in the object on the left in the screenshot below. | | |
| | | 2.5e-2 0.0250 | | |
| 6. | [Trend Display] | Added support for setting decimal places for Y-axis values. This | | |
| | | setting can be found in the Data Format tab in the object settings | | |
| | | window. | | |
| 7. | [Calendar] | Added output feature. By tapping on a date in the calendar, the date | | |
| | | can be output to the designated addresses. | | |
| | | | | |



EasyBuilder Pro Release Notes


V6.04.01

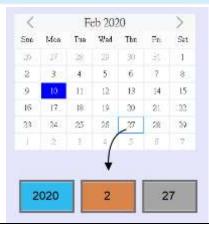

8. [History Data Added watch feature. By tapping on a record in History Data Display object, data in the selected row can be output to the designated addresses. This setting can be found in the General tab in the object settings window.



| 9. | [System | Added a new option: "Set value when leaving focus". When this |
|-----|--------------------|--|
| | Parameters] | option is selected, values will be written upon leaving the input mode |
| | | of a Numeric / ASCII object, even if not by pressing the ENTER key. |
| | | This setting can be found in General tab of System Parameter |
| _ | | Settings. |
| 10. | [Backup(Per-page)] | Added support for separating files according to date or number of |
| _ | [Backup(Global)] | rows when saving backup as CSV file. |
| 11. | [Recipe Database] | Added bit access support for BCD, HEX, Binary data types. |
| 12. | [Database Server] | Enabled TLS/SSL encryption and server verification when using |
| _ | | MySQL. This feature can be configured in TLS/SSL tab. |
| 13. | [Flow Block] | Added support for drawing non-vertical/horizontal lines as shown in |
| | | the following screenshot. |

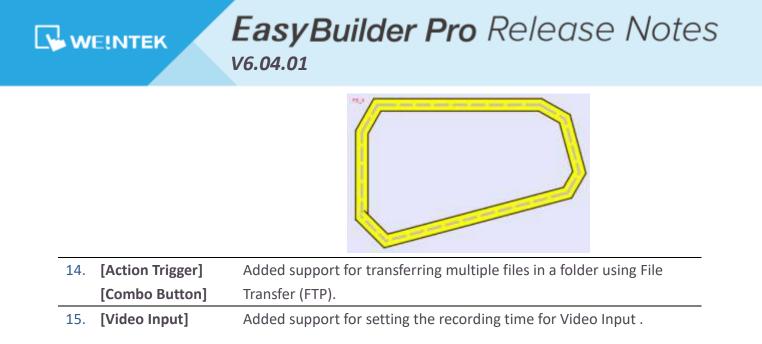

cMT Diagnoser

1. Added Macro Debug tool.

| cMT Diagnoser | | | | | × |
|---|---|----------------------|---|------|---|
| Object Devi | ce Packet Ma | cro MQTT | | | 1 |
| Execute Debug | | | | | |
| + hour-hand | I = 1 | 10 | O, Search | < | > |
| GetData(mn mn_float=mn hr_float=h hr_pointer | r = hr_float + mn_f _pointer, "Local H macro_0") | 9018, 1) Float/60 | , 1) | | |
| Watch | | | Output | | |
| | Value | Туре | [13:17:32] Connecting to server | | |
| Name | | float | [13:17:32] Server connected. [13:17:59] Execute macro (ID 000) | | |

cMT Viewer

 Added support for cMT Viewer to retain the value of the system register PLW-9134 (language mode (on tablet)). That is, when cMT Viewer is opened next time, it resumes last language setting.



Drivers

| 1. | [MICRO TREND | Added new driver. |
|----|-----------------------|-------------------|
| | UTREND UTC SERIES] | |
| 2. | [KUKA EtherNet/IP | Added new driver. |
| | (Implicit Messaging)] | |