


### 1 Installation and Startup Guide

This document covers the installation of cMT3072XHT Series HMI, for the detailed specifications and operation, please refer to Datasheet, Brochure and EasyBuilder Pro User Manual. Please read all warnings, precautions, and instructions on the device carefully before use.

#### Install Environment:

NEMA Rating	The HMI product is NEMA 4 rated (Indoor Only).
Electrical Environment	The HMI product has been tested to conform to European CE requirements. This means that the circuitry is designed to resist the effects of electrical noise. This does not guarantee noise immunity in severe cases. Proper wire routing and grounding will insure proper operation.
Environmental Considerations	<ol style="list-style-type: none"> <li>(1) Make sure that the displays are installed correctly and that the operating limits are followed. Avoid installing units in environments where severe mechanical vibration or shocks are present.</li> <li>(2) Do not operate the unit in areas subject to explosion hazards due to flammable gases, vapors or dusts.</li> <li>(3) Do not install the unit where acid gas, such as SO<sub>2</sub> exists.</li> <li>(4) This device should be mounted in the vertical position and for use on the flat surface enclosure.</li> <li>(5) For use in Pollution Degree 2 Environment and dry location.</li> <li>(6) Relative Humidity: 10% ~ 90% (non-condensing)</li> </ol>
Cleaning Considerations	Clean the device using dry cloths. Do not use liquid or spray detergents for cleaning.
IP Rating	IP 66
 Warning	Protection impairment if used in a manner not specified by the manufacturer. Déficit de protection si utilisé d'une manière non spécifiée par le fabricant.

### 2 Unpacking the Unit

Unpack and check the delivery. If damage is found, please contact the supplier.

**NOTE: Place the operator panel on a stable surface during installation. Dropping it or letting it fall may cause damage.**


The package includes:

- (1) Installation Instruction, 2-sided A4 \*1
- (2) Human Machine Interface \*1
- (3) Power Connector \*1
- (4) Brackets & Screws \*1 pack

### 3 Installation Instructions


Use a control box that provides enough stiffness. Cutout Dimension: 192 mm x 138 mm. Secure the operator panel in position, using all the fastening holes and the provided brackets and screws. Screw Torque: 2.6 ~ 3.9 lbf.in. (For reaching waterproof effect and preventing the panel from being deformed.)

Plan for adequate space around the unit and inside

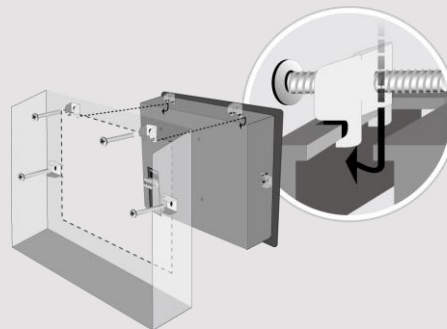

the enclosure, for ventilation and cable management. The ambient temperature around the unit should be within the specified range. Minimum required clearances (along the back of the unit): Maximum panel thickness: 4.5 mm. The aluminum flat-sheet at the back of the unit should be grounded to the sink since its heat can rise to 70°C in some cases. Maintain a gap between the back of the unit and other components.

### 4 Power Connections

-  Power Connector Specifications:
- Wire AWG: 24~12
  - Wiring Conductor Minimum Temperature: 0°C
  - Screw Torque: 4.5 lbf-in (max.)
  - Copper conduct only.

#### NOTE:

1. Connect positive DC line to the '+' terminal.
2. When downloading project using EasyBuilder Pro with PLC and PC simultaneously, do not disconnect the power supply, or result in damage to HMI or PC.

### 5 System Settings

When the HMI powers up and displays the EasyBuilder Pro logo, open the Setting page. To configure the system, tap "configure", and a login window will appear. Enter the system password (default: 111111). If the password is correct, and log in to make changes. In the Settings page, set HMI Time/Date/Name, and other system parameters.

### 6 EasyBuilder Pro Software

Launch EasyBuilder Pro software, select the connection method in the dialog box: Select Ethernet > IP tab > connect to HMI.

Using screensaver and backlight saver, tap "configure" to set the screensaver by displaying the same image on HMI. (Please refer to EasyBuilder Pro User Manual for details.)

## 7 Communication Connections

### NOTE:

1. COM2 and COM3 [RS485] 2W support MPI 187.5K, please use one at a time.
2. Only Tx & Rx (no RTS/CTS) may be used for COM1 RS232 when COM3 RS-232 is also used.

1 2 3 4 5  
6 7 8 9 **Con.B**

COM1/COM3 [RS232] 9 Pin, Male, D-sub

PIN#	COM1 [RS232]4W	COM3 [RS232]2W
1		
2	RxD	
3	TxD	
4		
5	GND	
6		
7	RTS	TxD
8	CTS	RxD
9	GND	

5 4 3 2 1  
9 8 7 6 **Con.A**

COM2/COM3 [RS485]/CAN Bus 9 Pin, Female, D-sub

PIN#	COM2 [RS485]2W	COM2 [RS485]4W	COM3 [RS485]2W	CAN Bus
1	Data-	Rx-		
2	Data+	Rx+		
3		Tx-		
4		Tx+		
5	GND			
6			Data-	
7				CAN_L
8				CAN_H
9			Data+	

## 8 Restore Factory Default

There are two methods to restore factory default, both of which will erase all project files and data stored on the device.

1. Follow the instructions in section 5 of this manual to open the Setting page and select the appropriate page based on the OS version before pressing "Reset HMI to default":  
For OS versions 20231201 or later, select the "System Properties" page, press "Reset HMI to Default," and select "Reset".  
For OS versions before 20231201, select the "Reset Options" page, press "Reset HMI to default", and enter "yes".
2. Alternatively, during login, enter "default111111".  
For OS versions 20231201 or later, select "Reset".  
For OS versions before 20231201, enter "yes".

## 9 Battery Replacement

Battery Specification: Type CR2032, Rated 3V

Battery replacement shall be performed by qualified personnel (engineer) only and care must be taken when handling lithium batteries. For more information on battery replacement and disposal considerations, please refer to the following link:

[http://www.weintek.com/download/MT8000/eng/FAQ/FAQ\\_103\\_Replace\\_Battery\\_en.pdf](http://www.weintek.com/download/MT8000/eng/FAQ/FAQ_103_Replace_Battery_en.pdf)


### CAUTION



Power

**NOTE:** Make  
installing the u

Use power output  
powered by DC p  
systems. The pow  
supply. The peak s




Fusing Require-  
ments

If the display does  
will protect agains  
period of time. Che




High Voltage

A resettable fuse  
DC voltage source

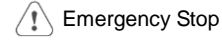

Emergency Stop

A Hard-wired EME  
ICS Safety Recom



Supply Voltage  
Condition


Do not power the  
power supply. Note  
power the unit.



Wire Routing


- a. Power wire ler
  - b. Please use tw
  - c. If wiring is to b
  - d. Keep AC, high
  - e. Add a resistor
- supply and the  
dissipation. Ty

### DANGER



Hardware  
Considerations

The system desig  
thereby create a  
interface can lea  
physical injury to  
If you use any pr  
potential safety ha  
steps depend on  
installation of soli  
installation of Con

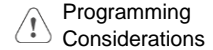

Programming  
Considerations

To conform to ICS  
ensure that all wr  
checks built into th  
personnel.

## Limited Warranty

This product is limited warranted ag  
The proven defective product will ei  
This warranty shall not cover any pr  
(a) Out of warranty period which is 12 month  
(b) Damage caused by Force Majeure, acci  
(c) Product has been repaired or taken apart  
(d) Products whose identification markings h